

114900 to 114999

Illustrated Parts List

Model Series

114900 to 114999

Non-Compliance

TYPE NUMBERS
0015 through 0054
0101 through 0157
0168 through 0187

Compliance

TYPE NUMBERS
3015, 3016,
3050, 3051,
3111 through 3157

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 012301 are listed herein only as 0123. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering the Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Number are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

PRINTED IN U.S.A.


BRIGGS & STRATTON

COPYRIGHT®






114900 to 114999

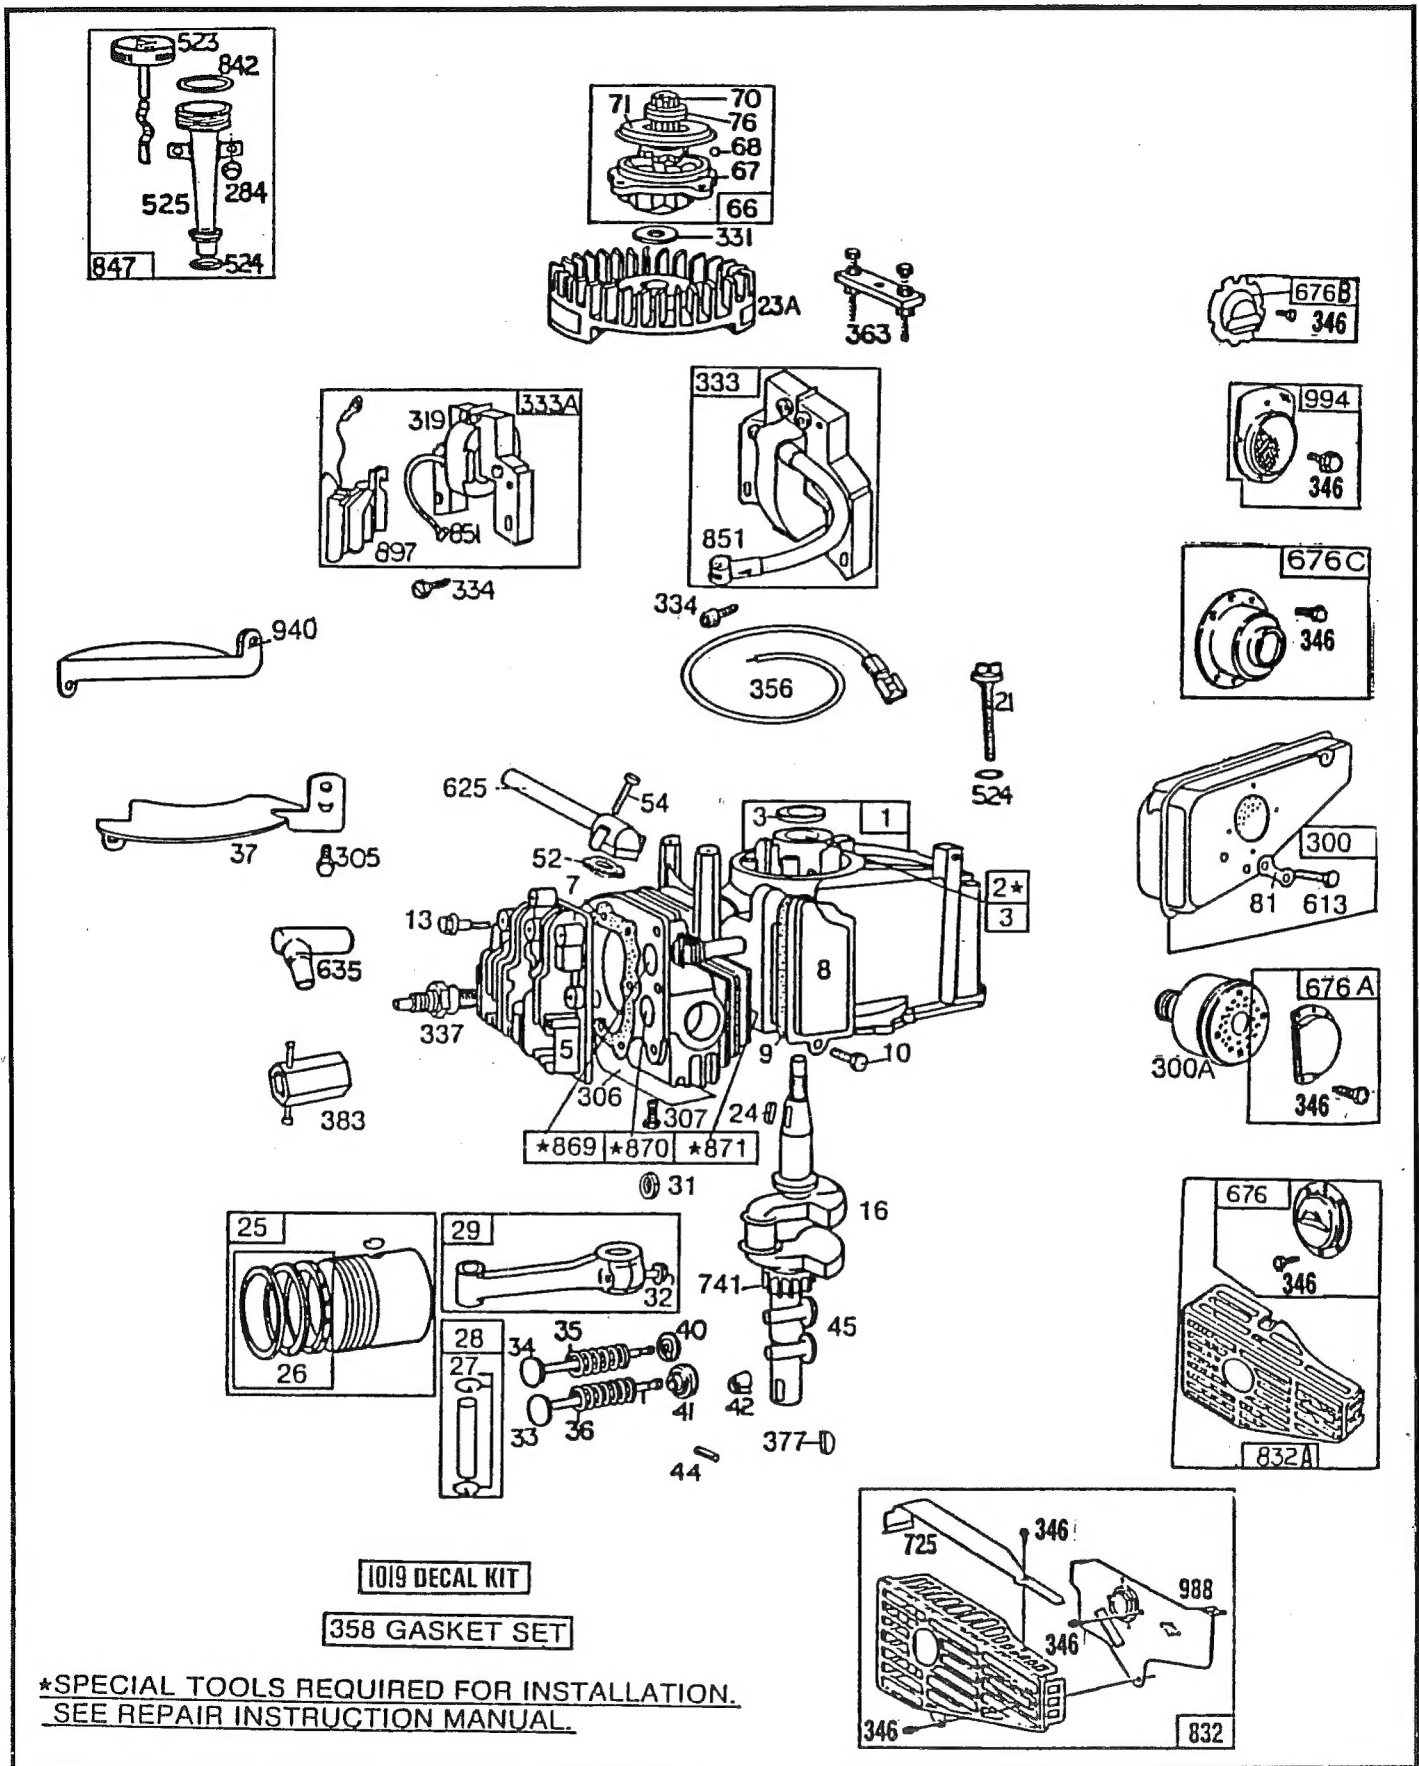


Sump assemblies illustrated on this page DO NOT include an oil filler opening.










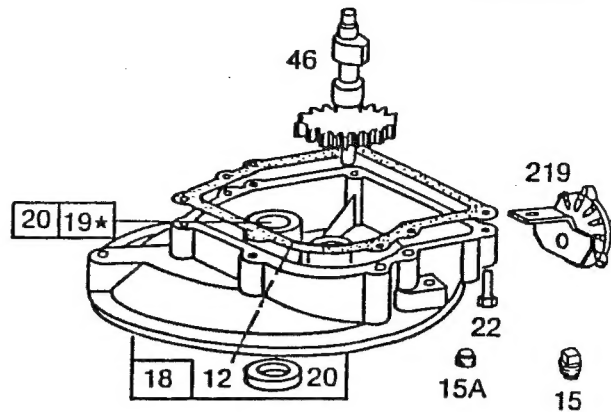


*SPECIAL TOOLS REQUIRED TO INSTALL.
SEE REPAIR INSTRUCTION MANUAL.

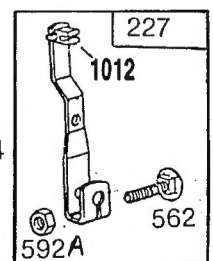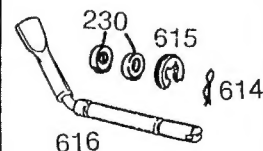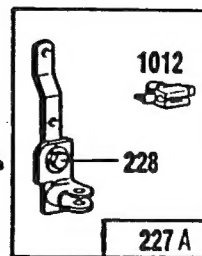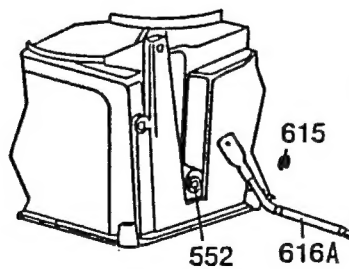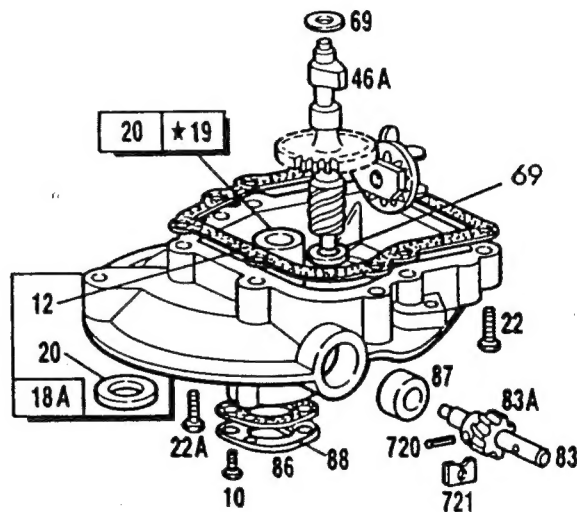



114900 to 114999

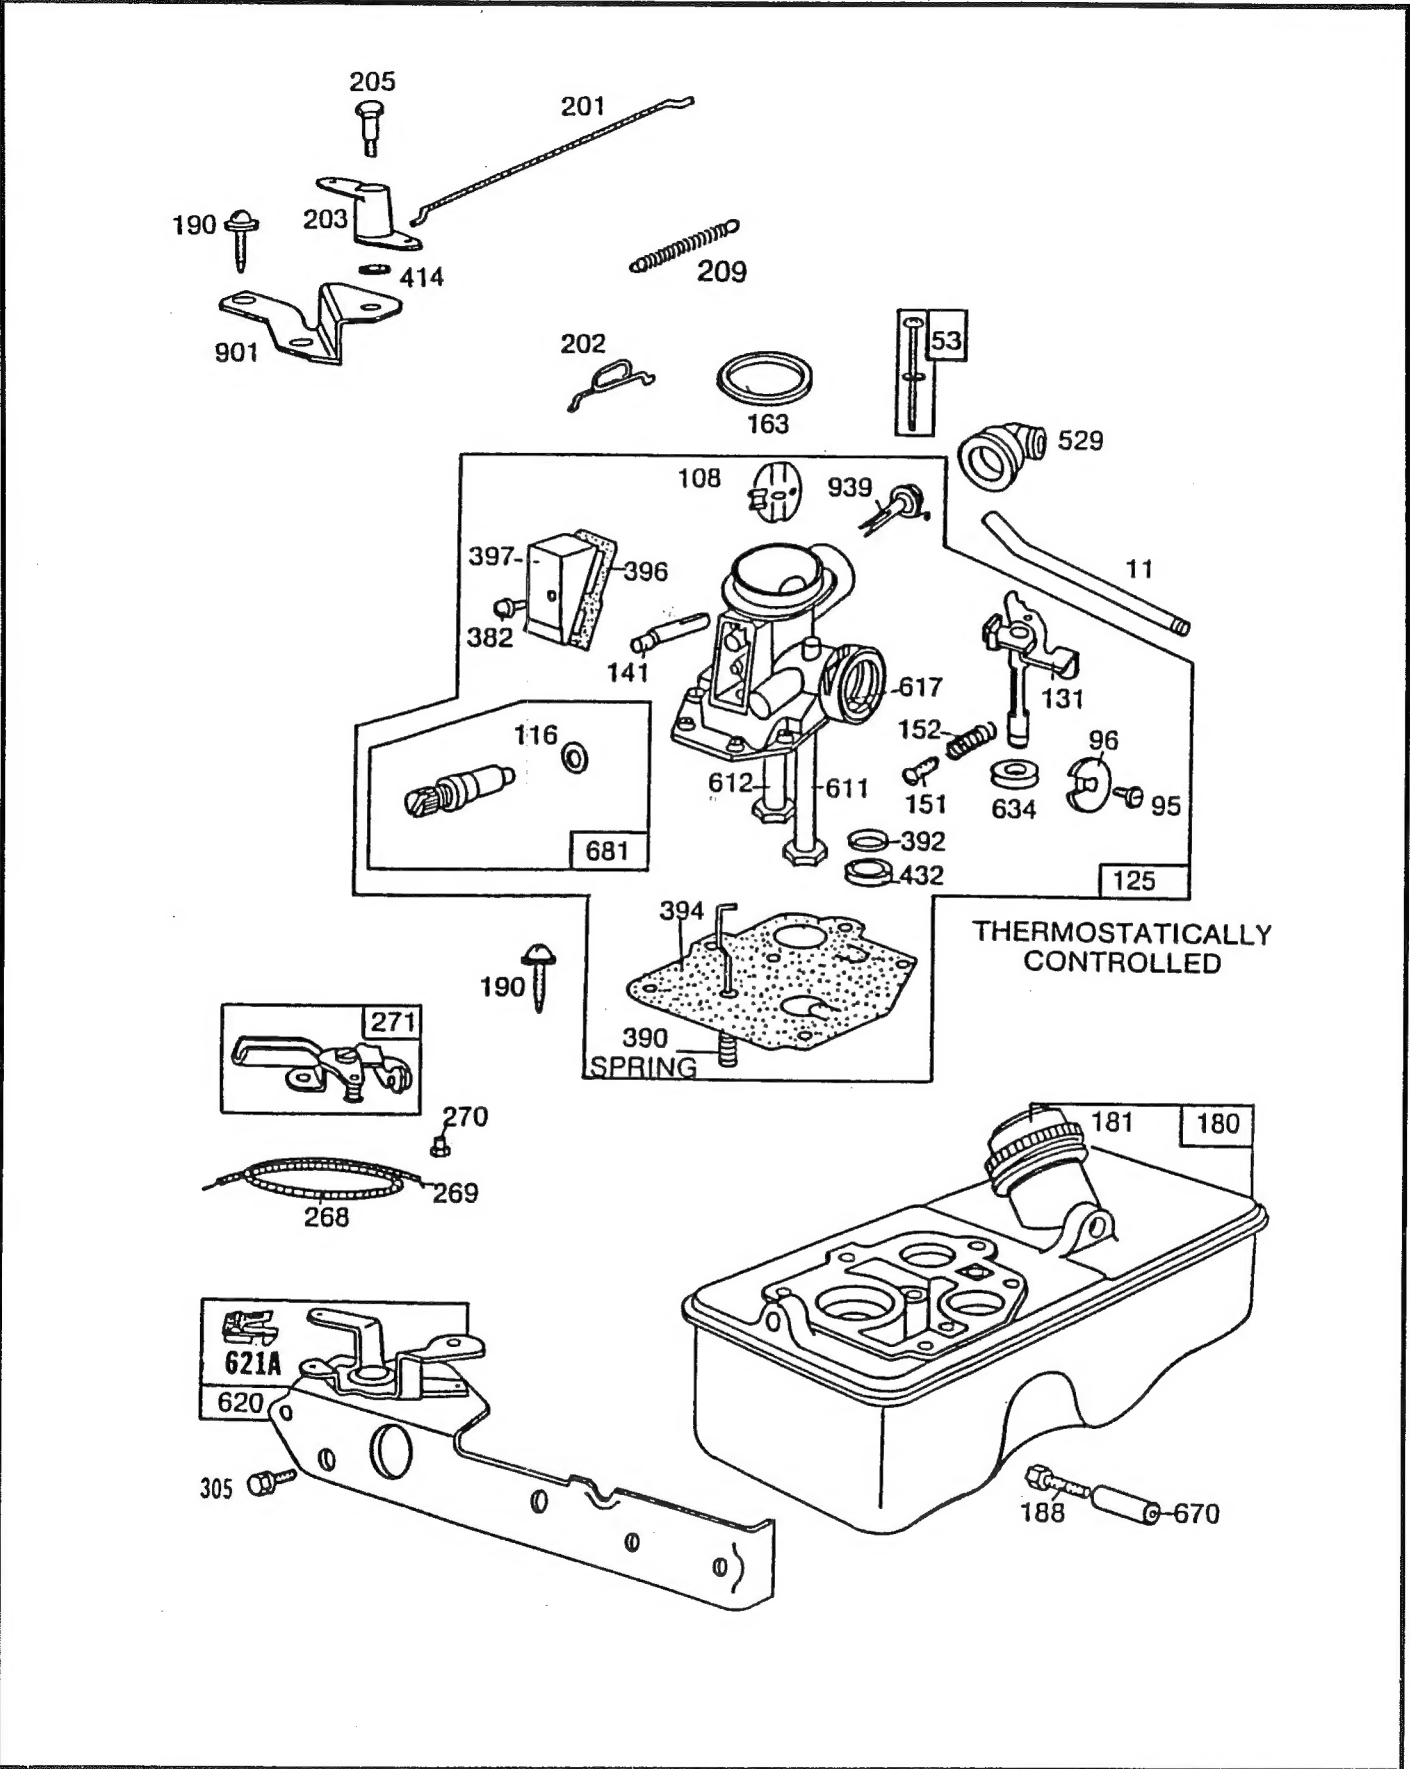

 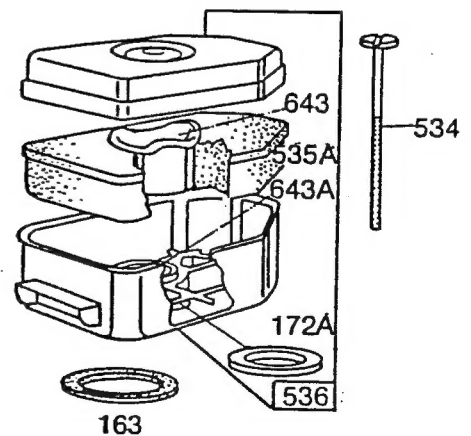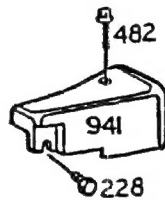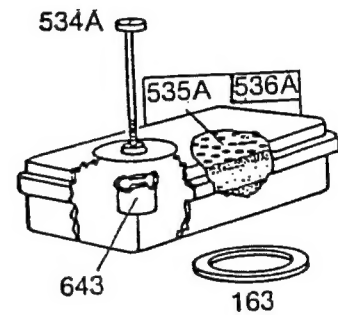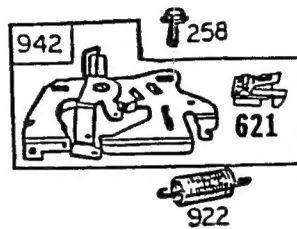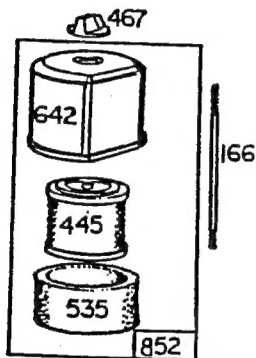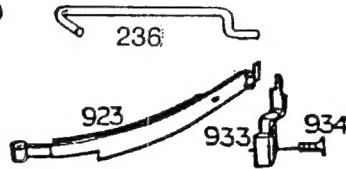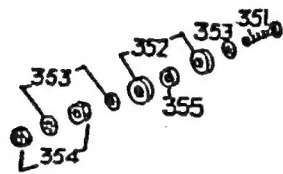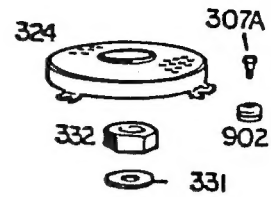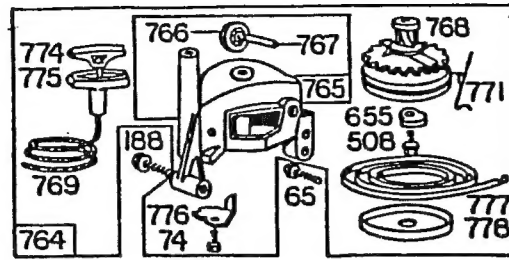

114900 to 114999

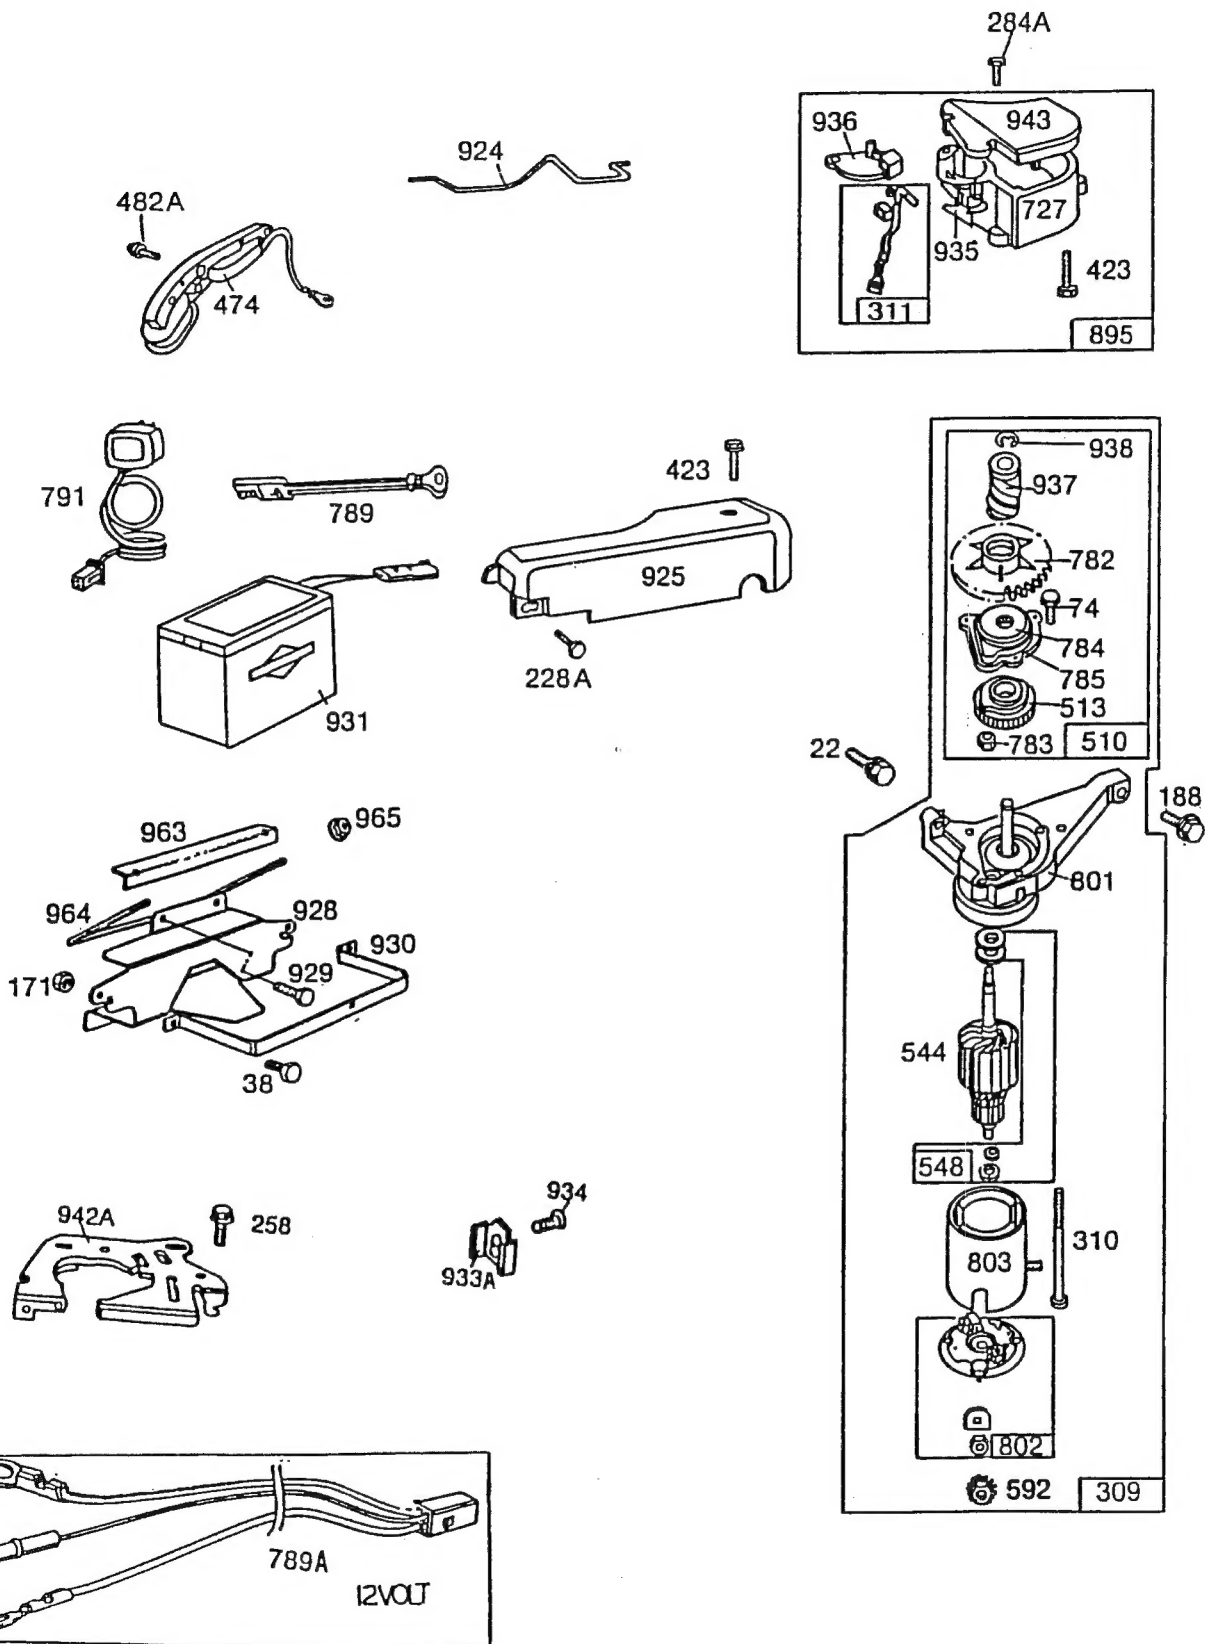

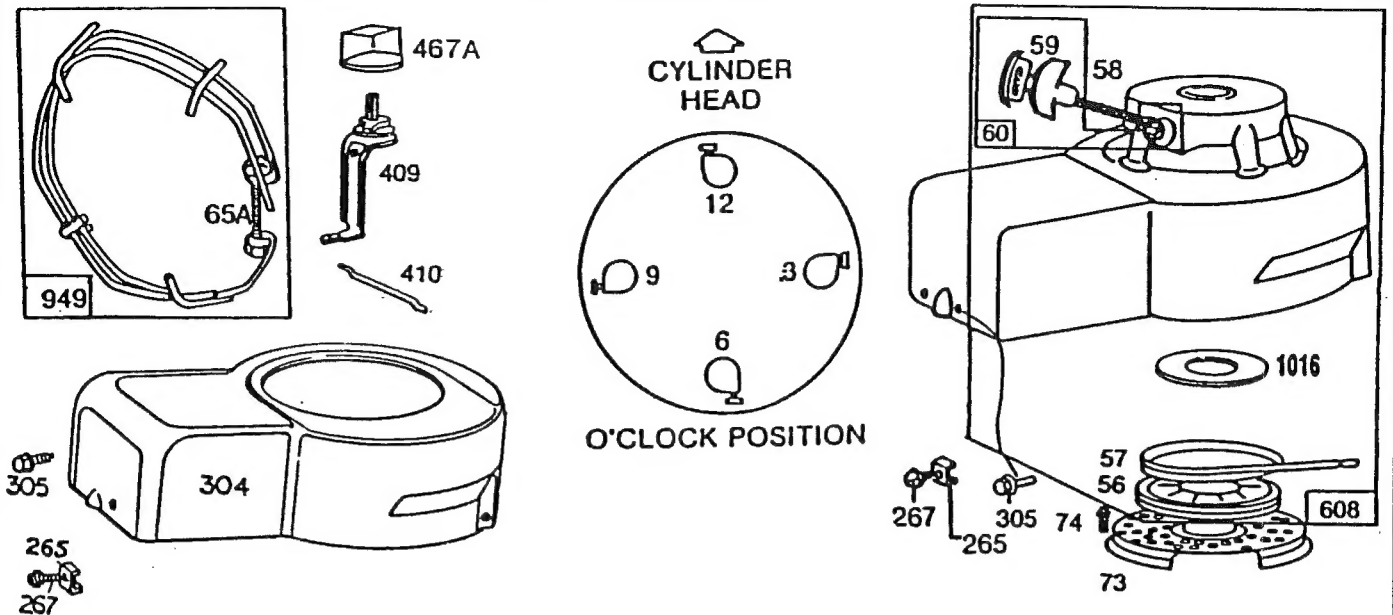

REWIND STARTER ASSEMBLIES FOR NON-BAND-BRAKE
CLOCK POSITIONS


1:30	3	6	9	12
396090	396468*	396794	398780	396411

*For Specials, See Text Ref. 608.

REWIND STARTER ASSEMBLIES FOR BAND-BRAKE
CLOCK POSITIONS

1:30	3	6	9	12
		396413*	397824	396017

*For Specials, See Text Ref. 608.

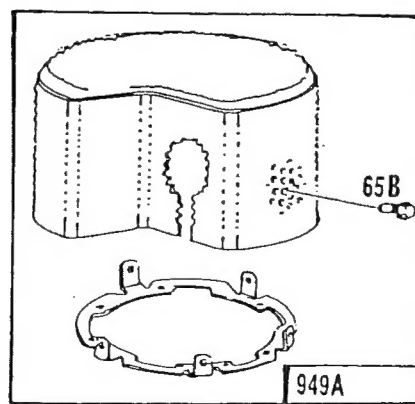

114900 to 114999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	399166	Cylinder Assembly			492094 Crankshaft			0140, 0141, 0143,
2	399269	Bushing—Cylinder			Used On Type Nos.			0144, 0145, 0146,
	Note:	Requires special tools for installation.			0029, 0054, 0131,			0149, 0150, 0151,
3	299819	Seal—Oil			0132, 0139, 0147,			0152, 0156, 0168,
5	211851	Head—Cylinder			0171, 3114, 3134,			0169, 0172, 0175,
7	* 270836	Gasket—Cylinder Hd.			3153, 3157.			0176, 0177, 0179,
8	298383	Breather—Valve Chamber			492096 Crankshaft			0181, 0183, 0187.
9	* 270239	Gasket—Valve Cover			Used on Type Nos.			394066 Flywheel—
10	93394	Screw—Breather and P.T.O. Gear Sump Cover (Ref. No. 86)			3050, 3051.			Magneto
		Mounting Sem			492097 Crankshaft			Used on Type Nos.
11	231292	Tube—Breather			Used On Type Nos.			0051, 0052, 0155.
12	* 270833	Gasket—Oil Sump—.015" thick (Standard)	18	395384	Sump—Engine	23A	395653	Flywheel—Magneto
	* 270895	Gasket—Oil Sump—.005" thick	18A	395390	Sump—Engine	24	222698	Key—Flywheel
	* 270896	Gasket—Oil Sump—.009" thick			Used on Model 114982 to 114988 Series.	25	396455	Piston Assy.—Standard
13	93111	Screw—Cylinder Hd. (1-15/16" long)	19	293709	Bushing—Engine Sump		396456	Piston Assy.—.010" O.S.
	Note:	93772 Stud—Cyl. Hd.		Note:	Requires special tools for installation.		396457	Piston Assy.—.020" O.S.
		22963 Washer	20	391483	Seal—Oil		396458	Piston Assy.—.030" O.S.
		Used on Type Nos. 3140, 3157.	21	280485	Gage—Oil Filler Plug (Used after Code Date 85051000.)	MODEL 114900 SERIES PISTON RING SETS:		
15	91084	Plug—Oil Drain		Note:	280381 Gage—Oil Filler Plug		Note:	For Chrome Piston
15A	93418	Plug—Oil Drain (Socket Head)	22	93032	Screw—Mtg. Sem	26	396459	Ring Set—std. Piston
		To Replace Crankshaft Gear Pin, Order Part No. 230978.	22A	93415	Screw—Sem (One used in Auxiliary Drive Gear Sump) on Model 114982 to 114988 Series.		396460	Ring Set—.010" O.S. Piston
16	492093	Crankshaft		Note:	Use 93032 Screw in the other (5) Sump Mounting Holes		396461	Ring Set—.020" O.S. Piston
	Note:	394881 Crankshaft Used on Type Nos. 0018, 0172, 0175.	23	394848	Flywheel—Magneto		396462	Ring Set—.030" O.S. Piston
		397231 Crankshaft Used on Type Nos. 0016, 0052, 0140, 0150, 0156, 0187.		Note:	393831 Flywheel—Magneto	27	26026	Lock—Piston Pin
		397235 Crankshaft Used On Type Nos. 0168, 0169.			Used on Type Nos. 0025, 0027, 0029, 0054, 0132, 0133, 0136, 0139, 0147, 0148, 0171, 0178, 0180, 0184, 0185, 3149.	28	391649	Pin Assembly—Piston—Standard
		492087 Crankshaft Used On Type Nos. 0027, 0135, 0136, 0142, 3016, 3112, 3130, 3133, 3140.			394032 Flywheel—Magneto		394861	Pin Assembly—Piston—.005" O.S.
					Used on Type Nos. 0015, 0016, 0018, 0117, 0137, 0138,	29	391640	Rod Assembly—Connecting
							Note:	For Connecting Rod with .020" undersize Crankpin Bearing—Order No. 393710.
						31	222282	Washer—Flat (One for Each Screw)
						32	94405	Screw—Connecting Rod
						33	261912	Valve—Exhaust
							Note:	212004 Valve—Exhaust Used on Type Nos. 3145, 3146, 3148.
						34	261233	Valve—Intake
						35	260552	Spring—Intake Valve
						36	26826	Spring—Exhaust Valve

* Included in Gasket Set—Part No. 391662

114900 to 114999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	Note:	26478 Spring—Exhaust Valve Used on Type Nos. 3145, 3146, 3148.	66	399671	Clutch Assembly—Rewind Starter	125	397180	Carburetor Assembly (Used After Code Date 83111404.)
37	223150	Guard—Flywheel	67	394897	Housing—Starter Clutch		Note:	396336 Carburetor Assy. Used on Type Nos. 3142, 3143.
38	93777	Screw—Sem	68	63770	Ball—Clutch			396586 Carburetor Assy. (Used Before Code Date 83111504.)
40	93312	Retainer—Intake Valve Spring Used with valves with groove in stem.	69	66874	Washer—Thrust	131	394035	Shaft and Lever—Throttle
				Note:	68938 Washer—Thrust Used on Auxiliary Drive P.T.O. Camshaft and is located next to the Worm Gear.	141	68908	Shaft—Choke
41	292259	Rotocap—Exhaust Valve	70	298799	Ratchet—Rewind Starter	151	93524	Screw—Rd. Hd.—5-40 x 1/2
42	230127	Retainer—Exhaust Valve Rotocap	71	394506	Washer—Clutch Retainer (Rubber Coated)	152	260746	Spring—Throttle Adj.
	Note:	93312 Retainer—Exhaust Valve Spring. Used on Type Nos. 3145, 3146, 3148.		Note:	221653 Washer—Clutch Retainer (Non-Coated)	163	271139	Gasket—Air Cleaner Mounting
44	230126	Pin—Exhaust Valve Rotocap Retainer	73	221661	Screen—Starter Pulley	166	231332	Stud—Air Cleaner (Used After Code Date 83111404.)
45	261250	Tappet—Valve	74	93490	Screw—Sem		Note:	231311 Stud—Air Cleaner (Used Before Code Date 83111504.)
46	395856	Gear—Cam	76	68238	Washer—Ratchet Sealing	171	93203	Nut—Hex
46A	396052	Cam Gear, Worm and Oil Slinger Assembly (Clockwise Rotation)	81	223256	Lock—Muffler Screw	172	271077	Gasket—Air Cleaner
	Note:	396064 Cam Gear, Worm and Oil Slinger Assy. (Counterclockwise) Used on Type Nos. 0051, 0133, 0138, 0148, 0154, 0169, 0176, 0181, 0186, 3051, 3123, 3126, 3138, 3151, 3155.	83	230831	Shaft—Drive	172A	271273	Gasket—Air Cleaner
				Note:	230870 Shaft—Drive Used on Type Nos. 3145, 3146.	180	396781	Tank Assembly—Fuel
52	* 270844	Gasket—Intake Elbow			230921 Shaft—Drive Used on Type No. 0176.	181	391494	Cap—Fuel Tank (Chrome)
53	391982	Screw—Tank to Carburetor			230948 Shaft—Drive Used on Type Nos. 0133, 0148, 0154, 0186, 3051, 3138, 3155.	188	94102	Screw—Fuel Tank and Starter Mounting
54	93485	Screw—Intake Elbow Mounting	83A	231278	Gear—Drive	190	93440	Screw—Fuel Tank Mtg.
56	280439	Pulley—Starter		Note:	231279 Gear—Drive Used on Type Nos. 0051, 0133, 0138, 0148, 0154, 0169, 0176, 0181, 0186, 3051, 3123, 3126, 3138, 3151, 3155.	201	261918	Link—Governor
57	490179	Spring—Rewind Starter				202	261897	Link—Throttle
58	280406	Rope—Rewind Starter—81" long	86	221780	Cover—Sump	203	280272	Bell Crank
	Note:	If longer rope is needed, Order No. 395883 and cut to required length. Order 66734 for 48-5/8" long rope.	87	391484	Seal—Oil	205	231520	Screw—Shoulder (Used After Code Date 86112300.)
59	396892	Insert—Starter Grip	88	270328	Gasket—Sump Cover		Note:	93838 Screw—Shoulder (Used Before Code Date 86112400.)
60	393152	Grip—Starter Rope	95	93499	Screw—Throttle Valve Mounting Sem	209	261936	Spring—Governor
65	93587	Screw—Vertical Pull Starter Mounting	96	211237	Valve—Throttle		Note:	261926 Spring—Governor Used on Type Nos. 0134, 0168, 0169, 0170, 3135.
65A	94124	Screw—Guard Retaining	108	280429	Valve—Choke			
65B	93572	Screw—Guard Retaining		Note:	280370 Valve—Choke Used on Type Nos. 3142, 3143.			
			116	280203	O-Ring			

* Included in Gasket Set—Part No. 391662

114900 to 114999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		261927 Spring—Governor Used on Type Nos. 0054, 0132, 0135, 0139, 0141, 0142, 0143, 0147, 0149, 0151, 0152, 0154, 0155, 0171, 0176, 0178, 0179, 0182, 0186, 3132, 3151, 3156.		Note:	If longer wire is needed, specify length in inches; if shorter wire is needed, order No. 26099 and cut to required length.	331	223047	Washer—Flywheel
		261935 Spring—Governor Used on Type Nos. 0051, 0052, 0177, 3140, 3145, 3146, 3147, 3148, 3153, 3157.	270	63426	Locknut—Control Wire Casing	332	92284	Nut—Flywheel
		261938 Spring—Governor Used on Type Nos. 0133, 0136, 0148, 0150, 0157, 3130, 3133, 3136, 3139, 3141, 3142, 3143, 3144, 3150.	271	290568	Lever Assembly—Control	333	397316	Armature—Magneto
219	394044	Oil Slinger Assembly	284	94073	Screw—Clamp Mounting	333A	395489	Armature—Magneto
227	491482	Lever Assembly Governor (Used After Code Date 88011000.)	284A	93892	Screw—Hex. Hd.	334	93381	Screw—Armature Mounting Sem
227A	396504	Lever Assembly Governor (Used Before Code Date 88011100.)	300	394644	Muffler—Exhaust	337	298809	Plug—Spark (with Gasket) 1-1/2" high—(37-42 mm.)
228	93758	Screw—Hex Head	300A	394569	Muffler—Exhaust		Note:	293918 Plug—Spark (with Gasket) 1-1/2" high (Resistor Type)
228A	93490	Screw—Hex Head			The Following Blower Housing is Used on Band Brake Engines	346	93705	Screw—Hex Hd.
230	220680	Washer	304	223204	Housing—Blower	351	93735	Screw—Terminal
236	262461	Link—Brake Lock—Out			The Following Blower Housings Are Used on Non-Band Brake Engines	352	66068	Washer—Insulating
258	94018	Screw—Hex Head		396412	Housing—Blower	353	92791	Washer—Lock—Shakeproof (3)
265	22372	Clamp—Casing		Note:	223287 Housing—Blower	354	90576	Nut—Hex.—8-32 (2)
267	93469	Screw—Clamp Mtg.			Used on Type Nos. 0015, 0016, 0017, 0018, 0051, 0052, 0117, 0137, 0138, 0140, 0141, 0143, 0144, 0145, 0146, 0149, 0150, 0151, 0152, 0155, 0168, 0169, 0172, 0175, 0176, 0177, 0179, 0181, 0183, 0187.	355	66554	Collar—Insulating
268	66986	Casing—Control Wire—48" long	305	94153	Screw—Sem	356	398808	Wire—Ground
	Note:	If longer casing is needed, specify length in inches; if a shorter casing is needed, order No. 66986 and cut to required length.	306	223263	Shield—Cylinder		Note:	396585 Wire—Ground (Dual Wire, cut to suit) Used on Type Nos. 0015, 0016, 0018, 0025, 0027, 0029.
269	26099	Wire Control, 54" long	307	93490	Screw—Sem	358	391662	Gasket Set
			307A	93758	Screw—Hex Head	363	19069	Puller—Flywheel (Optional Accessory)
			309	395852	Motor—Starter (6 Volt)	377	93065	Key—Woodruff No. 6
				Note:	397863 Motor—Starter (12 Volt)	382	93545	Screw—Choke Link Cover
					Used On Type No. 0185.	383	89838	Wrench—Spark Plug
			310	94051	Bolt—Starter Motor	390	261249	Spring—Diaphragm
			311	395728	Brush Kit—Starter Motor	392	260455	Spring—Fuel Pump Diaphragm
			319	395488	Armature Assembly (Less Trigger Coil)	394	391643	Diaphragm—Carburetor
			324	223006	Screen—Rotating	396	270571	Gasket—Choke Link Cover
						397	211678	Cover—Choke Link
						409	391590	Control—Dial
						410	260993	Link—Control
						414	223932	Washer
								(Used After Code Date 86112300.)
							Note:	220982 Washer (Used Before Code Date 86112400.)
						423	94026	Screw—Sem
						432	221377	Cap—Spring
						445	396424	Cartridge—Air Cleaner
						446	222844	Base—Air Cleaner
						446A	395642	Base—Air Cleaner

114900 to 114999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
467	212706	Knob—Air Cleaner	616	491405	Crank—Governor (Used After Code Date 88011000.)	681	395508	Needle Valve Kit
467A	299858	Knob—Dial Control				720	93474	Pin—Gear to Shaft
474	397880	Stator Assy.—Alternator				721	221779	Stop—Drive Shaft
482	93621	Screw—Sem	616A	394075	Crank—Governor (Used Before Code Date 88011100.)	725	223725	Shield—Heat
482A	94016	Screw—Hex. Hd.				727	280336	Cover Base—Electric Starter
508	93158	Screw—Sem						
510	395727	Drive Kit—Starter	617	270344	Seal—Fuel Intake Tube	729	280470	Clip—Wire
513	† 394815	Clutch Assembly— Electric Starter	620	394642	Plate—Carburetor Control	741	261533	Gear—Timing
						764	395874	Starter Assembly— Vertical Pull (81" Rope)
523	396372	Cap with Dipstick— Oil Filler		Note:	394882 Plate— Carburetor Control Used on Type Nos. 0015, 0016, 0018, 0025, 0027, 0029, 0051, 0052, 0132, 0135, 0138, 0143, 0145, 0146, 0147, 0150, 0152, 0153, 0155, 0171, 0178, 0180, 0181, 0183, 0184, 0185, 3147.		Note:	396082 Starter Assembly—Vertical Pull (48-5/8" Rope)
524	271485	Seal—Filler Tube				765	395914	Housing—Vertical Pull Starter
525	280578	Tube—Oil Filler (Used After Code Date 85051000.)				766	280022	Pulley—Rope (Small)
	Note:	280382 Tube—Oil Filler (Used Before Code Date 85051100.)				767	231048	Pin—Small Rope Pulley
529	280368	Grommet—Breather	621	396847	Switch—Stop (Used After Code Date 84030100.)	768	395870	Pulley and Gear Assembly—Starter (81" Rope)
534	93865	Screw—Air Cleaner				769	280406	Rope—Vertical Pull Starter (81")
534A	93374	Screw—Air Cleaner		Note:	297472 Switch—Stop (Used Before Code Date 84030200.)		Note:	If longer rope is needed, Order No. 280399 and cut to required length.
535	271466	Element—Air Cleaner						66734 Rope—Vertical Pull Starter (48-5/8")
535A	270848	Element—Air Cleaner				771	299961	Clip—Vertical Pull
536	394738	Cleaner—Assembly—Air				774	280121	Insert—Starter Handle
536A	391641	Cleaner Assembly—Air				775	280036	Grip—Starter Rope
544	396058	Armature—Starter				776	222049	Guide—Rope
	Note:	398636 Armature— Starter Used On Type No. 0185.	621A	396847	Switch Assembly—Stop (Used After Code Date 85032700.)	777	390066	Spring—Vertical Pull Starter
				Note:	297472 Switch—Stop (Used Before Code Date 85032800.)	778	280021	Cover—Vertical Pull Starter Pulley
548	396067	Washer Set—Starter	625	391377	Tube—Fuel Intake	782	† 280038	Gear—Electric Starter Spur
552	230732	Bushing—Governor Shaft	634	270167	Washer—Throttle Shaft (Felt)	783	† 261606	Gear—Electric Starter Pinion
562	92613	Bolt, Carriage (Governor Lever)	635	66538	Elbow—Spark Plug	784	† 223123	Cover—Electric Starter Clutch Gear
592	93991	Nut—Hex.—10-24	642	223306	Cover—Air Cleaner	785	† 271457	Gasket—Electric Starter Clutch Gear Cover
592A	231082	Nut, Hex	643	280374	Cup—Air Cleaner	789	396392	Wiring Harness Assy.— Mower (4-1/2" long)
608		Starter Assy.—Rewind See Chart on Illustrated Pages	643A	280342	Support—Air Cleaner Element	789A	397916	Wiring—Harness Used On Type No. 0185.
	Note:	398806 Starter Assy.— Rewind (6 o'clock) Used on Type No. 3145. 491929 Starter Assy.— Rewind (3 o'clock) Used On Type No. 0185.	655	222057	Anchor—Spring			
611	297219	Pipe—Fuel (long)	670	94038	Spacer—Fuel Tank Used on Engines with Band Brake			
612	296811	Pipe—Fuel (short)		Note:	94047 Spacer—Fuel Tank Used on Engines without Band Brake			
613	93935	Screw—Muffler Mtg.	676	396548	Deflector—Muffler			
614	93306	Pin, Cotter	676A	393760	Deflector—Muffler			
615	93307	Retainer—E-Ring	676B	393756	Deflector—Muffler			
			676C	397931	Deflector—Muffler			

† Included in Starter Drive Kit—Part No.
395727

114900 to 114999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
791	395569	Charger—Battery (120 Volt)	930	223161	Bracket Support— Battery			
	Note:	395585 Charger— Battery (240 Volt)	931	395559	Battery (6 Volt)			
		493357 Adapter— Charger	933	223448	Pivot—Band Brake			
		(For Use With 493359 Battery)	933A	223278	Spacer			
801	395851	Motor Output End Cover and Mounting Bracket	934	94037	Screw—Band Brake Pivot			
802	396061	Cap Assembly—End	935	223128	Terminal—Switch			
803	396059	Housing—Starter	936	280338	Actuator—Switch			
832	399637	Guard Group—Muffler	937	† 280366	Spline—Starter			
832A	396313	Guard—Muffler	938	† 93941	Ring—Retainer			
842	270920	Seal—Filler Cap	939	395665	Shaft Assembly—Choke			
847	399030	Filler Group—Oil (Used After Code Date 85051000.)	940	222403	Guard—Flywheel			
	Note:	395869 Filler Group—Oil (Used Before Code Date 85051100.)	941	280395	Cover—Linkage			
851	221798	Terminal—Ignition Cable	942	493248	Control Plate—			
852	396397	Cleaner Group—Air	942A	224331	Bracket Plate—Band Brake			
853	394850	Bracket—Air Cleaner	943	280322	Cover Top—Electric Starter			
869	211172	Seat—Intake Valve (Standard) (Used After Code Date 88073100.)	949	396579	Guard—Rewind Starter			
	Note:	210879 Seat—Intake Valve (Used Before Code Date 88080100.)	949A	398833	Guard—Rewind Starter			
870	211291	Seat—Exhaust Valve (Standard)	963	223502	Strap			
	Note:	For Options, See Repair Manual	964	94107	Bolt—U			
871	262001	Guide—Exhaust Valve	965	94108	Nut			
	Note:	63709 Guide—Intake Valve See Repair Instruction Manual.	988	223600	Bracket—Muffler			
895	394767	Switch Group	994	398067	Arrester—Spark			
897	394970	Trigger Coil Assy.	1012	280414	Retainer—Link			
901	490818	Bracket—Bell Crank	1016	490817	Spacer			
902	280271	Grommet—Screen	1019	491099	Decal Kit			
922	261647	Spring—Brake						
923	394867	Brake Assembly—Band						
924	261881	Link—Starter Switch						
925	280363	Cover—Linkage						
928	223162	Bracket—Battery						
929	93980	Screw—Sern						

† Included in Starter Drive Kit—Part No.
395727